

MEDATECH ERING HEAVY-DUTY EQUIPMENT INNOVATION

MECHANICAL/STRUCTURAL DESIGN & BUILD | CONTROL SYSTEMS, SOFTWARE & AUTOMATION HYDRAULIC & FLUID SYSTEMS | ELECTRICAL DESIGN | HYBRID & ELECTRIC DRIVETRAINS

ADVANCING MOBILE EQUIPMENT DESIGN

MEDATech (Mobile Equipment Design And Innovation Technology) is in the business of innovation. We solve design problems, improve efficiency, build software solutions and leverage data-driven intelligence. Our Engineering Services division provides OEMs and end users with custom solutions for their heavy-duty mobile equipment needs.

	A HISTORY OF INNOVATIVE ENGINEERING	page 3
	CAPABILITIES	page 4/5
0 2	FEASIBILITY STUDIES & CONSULTING	page 6
	VEHICLE CONTROL SYSTEMS & SOFTWARE DEVELOPMENT	page 7
	WORLD'S FIRST ON-ROAD BATTERY-ELECTRIC HAUL TRUCK	page 8
	HYBRID RETROFIT MODERNIZES OILFIELD WORKOVER RIGS	page 9
4	ONE RIG TACKLES FOUR UNDERGROUND DRILLING TASKS	page 10
	HYBRID DUAL-MODE DRILL BOOSTS DAM REMEDIATION SAFETY	page 11
	OPTIMIZING OPG'S NUCLEAR WASTE TRANSPORT FLEET	page 12
	MONORAIL SYSTEM FOR HIGH-EFFICIENCY MINING	page 13
0 00	BATTERY-ELECTRIC MOTOR GRADER RETROFIT	page 14
Time Ton	TRUCK-MOUNTED AUGER DRILL	page 15

A HISTORY OF INNOVATIVE **ENGINEERING**

MEDATech Engineering Services Limited has been designing, building and upgrading industrial mobile equipment, as well as software solutions, for customers around the globe since 2003.

ACCELERATING PRODUCT DEVELOPMENT

We succeed, quickly - where others don't - because of our teams. Our engineers, technologists and skilled shop mechanics; our hydraulics team; our electrical engineering & software team; our robotics controls team; and our talented field service team. Because we work so closely together, nothing is lost in translation.



Together we upgrade existing machines, plan and build brand new mobile equipment, and create advanced software and control systems. We work closely together with you to achieve your project's objectives. We accelerate product development across industries including Mining, Oil & Gas, Construction, Defense, Energy and Transportation. Got an idea? We can make it a reality.

CUSTOMERS ACROSS INDUSTRIES







































3/16 **Engineered Solutions**

CAPABILITIES

WHY CHOOSE MEDATECH?

Advanced skills, tight teamwork

Whether it's a vehicle upgrade or ground-up build, MEDATech is unmatched at completing work quickly and correctly. Our teams (sofware, mechanicals, automation/robotics controls, hydraulics, electrical and service) work very closely together to achieve objectives.

Longstanding customer relationships

A handful of MEDATech clients have been working with us for 10, 20+ years. Why? Because the question for us is always the same: is there a way we can make this even better?

Global reach

We tackle projects for customers on four continents. When you need commissioning, service or modification, our team is on its way.





MECHANICAL/STRUCTURAL DESIGN & BUILD

Ground-up builds can include vehicle frame/ chassis construction with 3D modelling and FEA materials evaluation; Hi-Fi Battery-Electric Vehicle (BEV) Simulation; drive systems; tires/tracks; all controls, systems and interfaces.

CONTROL SYSTEMS, SOFTWARE & AUTOMATION

Control systems are the brains of every machine. We design Vehicle Management Units (VMUs), Human-Machine Interfaces (HMIs), battery Temperature Management Systems (TMSs), and software systems that do everything from controlling our sophisticated automation packages to modelling and monitoring full-site energy usage. We also build secure telematics systems that transmit CAN network data for diagnostics, remote control and other functions.

HYDRAULIC & FLUID SYSTEMS

Our engineering-first approach optimizes hydraulic and fluid systems for performance. We deliver precise, low-maintenance designs for tough environments that are validated virtually before parts are ordered.

ELECTRICAL DESIGN CAPABILITIES

Capabilities include high voltage panel design, AC/DC electric systems, low/high voltage distribution panels, harness design, installation & assembly, and serial communications such as CAN bus & ISO bus.

HYBRID & ELECTRIC DRIVETRAINS

Many of our vehicles are battery electric, but hybrids offer a strong step toward decarbonization. Diesel/battery-electric hybrids reduce fuel use by 30–50%+. A smart choice for fleets transitioning to full electrification.

Engineered Solutions 5 / 16

FEASIBILITY STUDIES & CONSULTING

Feasibility Studies & Consulting

Feasibility studies assess both technical and commercial viability. Answering key "what ifs" helps ensure success and drives rapid, transformational outcomes.

Feasibility in action: OPG Evaluates
Hybrid Power for Next-Gen
Transporters



Ontario Power Generation (OPG) needed to upgrade its diesel-powered transporter fleet to meet Tier 4 emissions standards and reduce indoor noise in nuclear facilities. They

sought guidance on drivetrains, batteries, and system specs for future procurement.



We assessed EV and hybrid architectures, evaluating system complexity, efficiency, and suitability.
Battery options—lead-acid,
Ni-MH, sodium-ion, and lithium-ion—
were compared on energy density,
cycle life, cost, and safety. Electric
motor and electronics suppliers were
vetted for hybrid system fit.

RESULTS

The feasibility study clarified drivetrain options and trade-offs, leading to OPG's decision to adopt a Gen 4 transporter that surpasses emissions requirements and supports long service life. The study reinforced OPG's leadership in low-emission nuclear logistics and shaped future procurement strategy.



VEHICLE CONTROL SYSTEMS & SOFTWARE DEVELOPMENT

Control Systems & Software

MEDATech designs control systems including Vehicle Management Units (VMUs) such as the AltDrive VMU—central to hybrid and EV powertrains. VMUs integrate drive, steering, and charging logic. We also build and integrate CanBus networks, GPS, automation, TMS, HMIs, and telematics, which enable secure wireless transmission of CAN-network data, essential for diagnostics, efficiency analysis, and gathering site-specific data—like geotechnical info from drills.


Software Development

Modern EV and heavy-duty systems rely on smart software to manage sensors, drive logic, operator interfaces, and data logging. MEDATech creates custom code for vehicle functionality, like the autonomous RodBot™ material handler.

Packaged Solutions

 Fleet Feasibility Studies simulate total fleet energy use, battery sizing, charging infrastructure, and cost comparing BEV and diesel fleet efficiency. MEDAData™ logs CAN-bus data, fault codes, and operator inputs to power predictive maintenance and analytics, with dashboards and event logs.

MEDATech software isn't off-the-shelf—it's engineered for the grey area of operational nuances. Model-based development ensures consistent, standards-based code that's been proven in the field, managing EV fleets across mines and heavy-industrial sites.

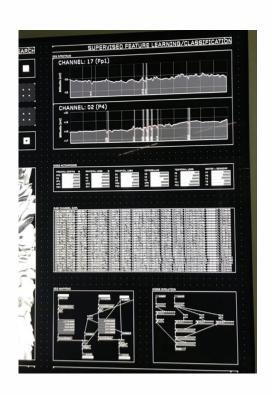

Engineered Solutions 7/16

WORLD'S FIRST ON-HIGHWAY BATTERY-ELECTRIC HAUL TRUCK

MEDATech's AltDrive-equipped Western Star 4900XD hauls concentrate at Highland Valley Copper mine, B.C.



In a mining industry first, MEDATech converted a Western Star 4900XD into a battery-electric haul truck for Teck Resources. Since 2022, it has transported concentrate from Highland Valley Copper mine to a rail terminal in B.C. powered by the MEDATech AltDrive system.



Nicknamed the 'Teck Truck,' it avoids 418 Teck aimed to decarbonize a 46 km tonnes of CO₂ emissions annually. It runs round-trip concentrate haul without sacrificing performance or uptime, in quietly with lower maintenance, strong regenerative braking and more power than a diesel.

line with sustainability goals.

//\ CHALLENGE

MEDATech equipped the truck with its AltDrive electric drivetrain. The vehicle delivers 135 km range, regenerative braking, and hot-swappable battery packs.

HIGHLIGHTS

· 135 km range with modular battery swap

Regenerative

Zero tailpipe

brakina

- · -418 tonnes CO₂ emissions annually
- · Quieter, smoother, lower-maintenance

HYBRID RETROFIT MODERNIZES OILFIELD WORKOVER RIGS

Watson Hopper's diesel-electric hybrid conversion delivers better production, efficiency and much more



Once Colorado-based Watson Hopper partnered with MEDATech, it was able to offer a hybrid diesel/battery-electric retrofit that outperforms diesel workover rigs while cutting noise, fuel use, and emissions.

//\ CHALLENGE

Conventional rigs rely on diesel engines running even when stationary for days. Operators needed a solution that worked in remote areas without grid access.

SOLUTION

A MEDATech Feasibility Study showed hybrid was the best fit. The diesel engine acts as a generator, while batteries power the drive system, hydraulics, and a powerful winch motor. When grid power is not available, diesel run time averages 1.5 hours per 12-hour shift.

□□□ RESULTS

The first hybrid rig went from design to delivery in just over a year. With two now operating, Watson Hopper has ordered four more. Operators report faster, more precise winching, quieter operation and low fuel costs.

HIGHLIGHTS

- · Hybrid retrofit: power, efficiency, safety
- · Fuel savings + carbon reduction

9/16 **Engineered Solutions**

ONE RIG TACKLES FOUR UNDERGROUND DRILLING TASKS

The RaisePro-48 In-The-Hole drill brings game-changing versatility, safety, and efficiency to underground mining

MEDATech's RaisePro-48T, unveiled at MINExpo 2024, brings unmatched versatility to underground mining. This track-mounted ITH raise drill handles production bores, service holes, slot raises, and manways—all in one unit—improving safety, precision, and productivity.



Underground mines have needed multiple drills for different hole sizes (3.5" to 48"), driving up costs, complicating logistics, and increasing risks during rig swaps.



MEDATech Borterra developed the RaisePro-48T to handle 3.5"–48" holes with 360° reach. Equipped with a top-drive mast, it delivers power for raise-boring and fast production. Features include CAN-BUS modular controls, remote operation, rod presenter, and optional RodBot for safe, automated pipe handling.



A trial at Vale's North Mine in Sudbury saw RaisePro replace four rigs with one, simplifying operations. Full reach, remote control, and automation also reduced operator exposure and increased efficiency.



- One rig covers 4 drilling functions,
 3.5" to 48" holes
- Increased safety
- Reduced capital and maintenance costs



HYBRID DUAL-MODE DRILL BOOSTS DAM REMEDIATION SAFETY

Medatech WS6000 enhances accuracy and efficiency for Alabama Power's dam program

Stabilizing embankment dams involves injecting cement into bored holes to reinforce subsurface rock. To improve safety and speed, Alabama Power adopted the WS6000 Hybrid Water/ Sonic Drill, which combines sonic and water-hammer technologies in one rig.



At Alabama's Logan Martin Dam, remediation required accurate drilling through overburden and karst.

Traditional methods relied on two rigs and multiple setups—slowing work, increasing risk, and reducing accuracy.



MEDATech engineered the WS6000 to integrate high-frequency sonic and high-pressure Wassara water-hammer drilling in a single top-drive unit. Operators switch modes instantly. The track-mounted rig features RodBot, which increases safety by automating rod and casing handling. The rig also transmits data for remote diagnostics and geotechnical insight.



The WS6000 improves drilling speed and precision. Dual-mode drilling minimizes deviation, while RodBot improves crew safety. Remote monitoring enhances performance and reduces downtime.

HIGHLIGHTS

- · Two drilling technologies in one rig
- · RodBot automates rod handling
- \cdot Live geotechnical and rig data
- \cdot Faster cycles, greater precision



Engineered Solutions 11/16

OPTIMIZING OPG'S NUCLEAR WASTE TRANSPORT FLEET

Comprehensive assessment, overhaul and maintenance program boosts safety across Ontario Power Generation sites







In 2005, Ontario Power Generation (OPG) enlisted MEDATech to upgrade its nuclear waste transporter fleet—targeting defect elimination, condition monitoring, and preventive maintenance to meet nuclear safety standards. MEDATech still supports system upgrades and lifecycle management today.



Transporters at three OPG sites suffered from hydraulic failures, CANbus errors, and mechanical flaws. No standardized maintenance plan led to unplanned downtime and safety risks.



MEDATech conducted a full fleet health assessment to identify failure patterns,

then implemented a lifecycle strategy for all transporter models: preventive maintenance, condition monitoring, and a unified spare parts system. A custom evaluation matrix aligned with nuclear safety and reliability standards.

RESULTS

Reliability improved fleet-wide.
MEDATech's protocols are now part of
OPG's procurement standards, a key
element of its long-term modernization
plan. Ongoing support and system
upgrades continue.

HIGHLIGHTS

- · Reduced downtime, better safety
- · Unified maintenance across sites
- Evaluation model meets nuclear safety standards

MONORAIL SYSTEM FOR HIGH-EFFICIENCY MINING

Re-engineering underground mining: MEDATech and Torex Gold pioneer the Muckahi System

Torex Gold partnered with MEDATech to revolutionize underground mining on steep terrain using a compact monorail system within narrow tunnels.



Move ore, equipment, personnel, and tailings efficiently through steep, confined tunnels (up to 30° incline) while meeting a target of 7,000 tonnes/day.

SOLUTION

Together with mining equipment innovator Fred Stanford, MEDATech developed the Muckahi Mining System—a ceiling-mounted electric monorail supporting drilling, mucking, scaling, conveying, and personnel transport. The system uses battery-electric locomotives to navigate 4m×4m tunnels with ease. MEDATech built or adapted all equipment.

At Torex's El Limón-Guajes site in Mexico, Muckahi proved effective on 30° slopes, streamlining ore transport and mining operations. It nearly doubled projected IRR and accelerated cash flow by 60–80%, with up to 95% GHG reduction and minimal ventilation needs.



- · Successful trials at 30° gradients
- · 30% capex/opex savings
- ·~95% GHG reduction
- ·~50% tunnel size reduction



Engineered Solutions 13 / 16

BATTERY-ELECTRIC MOTOR GRADER RETROFIT

Decarbonizing road maintenance: MEDATech and Borden Gold innovate with a battery-electric retrofit

For Borden Gold to meet their goal of opening the first all-electric underground mine in Canada, they needed to convert a number of machines from diesel to batteryelectric. The miner selected MEDATech to convert a Caterpillar 12M3 grader into a fully battery-electric machine for underground mining.



Replace a diesel-powered grader with a zero-emission alternative without sacrificing performance or range in underground environments.



MEDATech retrofitted the 12M3 with a 300 kWh battery and dual-motor electric drive. The battery-electric grader matches diesel performance and grading force, with up to 8 hours of runtime. All components battery, controls, and drivetrain—were integrated into the original chassis without structural changes.



The grader was deployed at Borden Gold, marking the first known batteryelectric retrofit of a motor grader underground. The project cut GHG emissions, noise and ventilation needs while maintaining diesel-equivalent performance.



- · First battery-electric grader underground
- · 8-hour runtime, 300 kWh battery
- · Zero tailpipe emissions
- · Matches diesel performance
- · Reduced noise & ventilation



TRUCK-MOUNTED **AUGER DRILL**

Breaking new ground: the first highway-legal, truck-mounted 12-foot diameter auger drill, for Hydro One

In 2010, Hydro One asked MEDATech to build a truck-mounted auger drill for transmission line expansion.



/\/\ CHALLENGE

Design a mobile auger capable of drilling holes up to 12 feet in diameter and 60 feet deep—while staying roadlegal in Ontario. No 12' drill had ever been mounted on a highway-legal truck.



SOLUTION

We built a custom drill on a Kenworth T800 chassis, with a 140,000 ft-Ib rotation drive powered by dual radial piston motors and a singlereduction gearbox. A CAN-BUS control system enabled touch-screen smart functions, including a "return to centre" command.



Delivered in under 18 months, the drill weighed under 100,000 lbs-meeting highway limits as well as performance targets across the new 200 km line.



- · First highway-legal 12' truck-mounted auger
- · 140,000 ft-lb custom rotation drive
- · Smart "return to centre" function
- Fully certified for Ontario roads





15 / 16 **Engineered Solutions**

DESIGNING OR UPGRADING MOBILE EQUIPMENT?

LET'S GET YOU ON THE FAST TRACK.

OEMs and end users turn to MEDATech for accelerated mobile equipment development. We have been acting as an outsourced R&D department for vehicle software solutions and builds since 2003. If you have an idea,

WE CAN MAKE IT HAPPEN.

MEDATECH **ENGINEERING**

MEDATech Engineering

35 Sandford Fleming Dr., Collingwood, ON L9Y 5A6 | 1 (705) 443-8440 | sales@medatech.ca

Learn more: MEDATech.ca Serving Customers Worldwide